

safariPlast



Pocket Style Fender Flares Assembly Guide



Required 2 people for assembly




Cleaning liquid or M600 thinner, fiber gland



Power drill, drill bit 8mm diameter



Protector paint spray

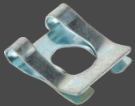

Spring clip 22 pieces



4.8x19 washer screw 24 pieces



philips screw driver



torque-limiting wrench (T25)



Assembly time 30 minutes



Image 1.1

- Image 1.1 Pay attention the surface to be assembled is clean and dry
- Clean the the surface to be assembled via cleaning thinner (M600) or cleaning liquid.

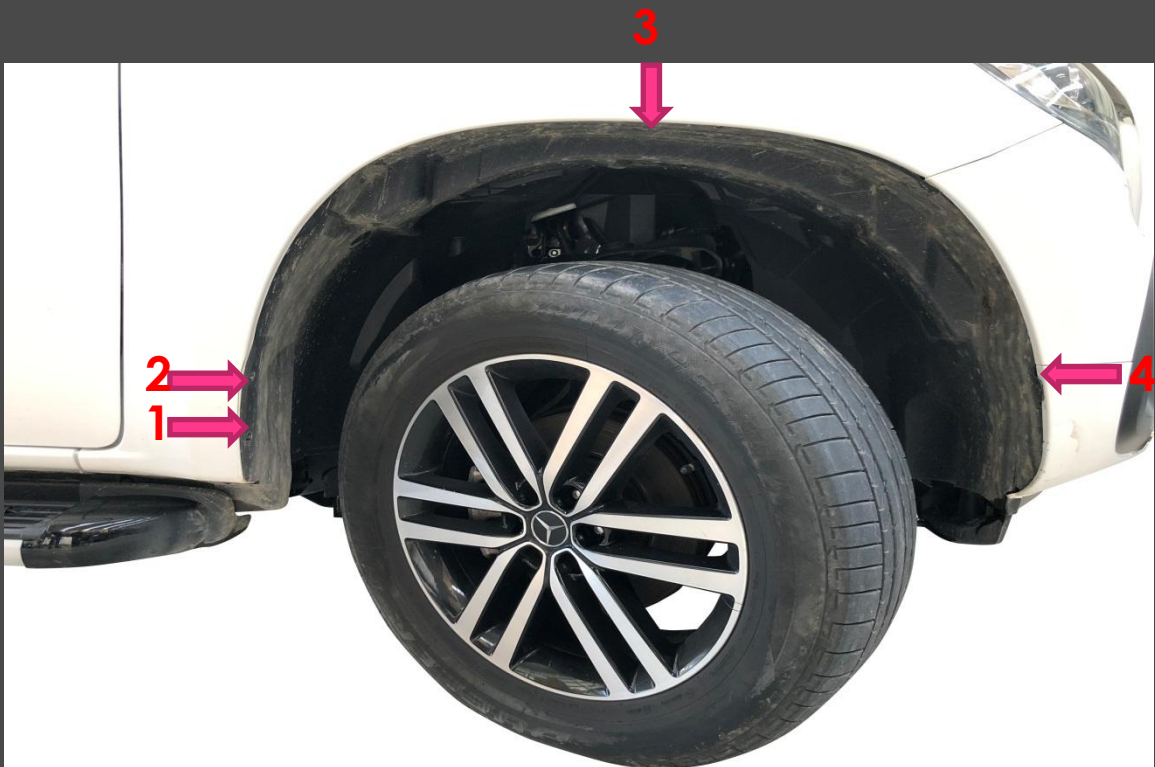


Image 1.2

- Image 1.2 Screw places are marked with arrows.
- Screw off via T25



Image 2,1

- Image 2.1 Place the product to be assembled to the vehicle .
- Reference marked hole with an arrow on the product, to bumper.
- Image2.2 Drill the referenced point via 8mm diameter drill bit.



Image2.2

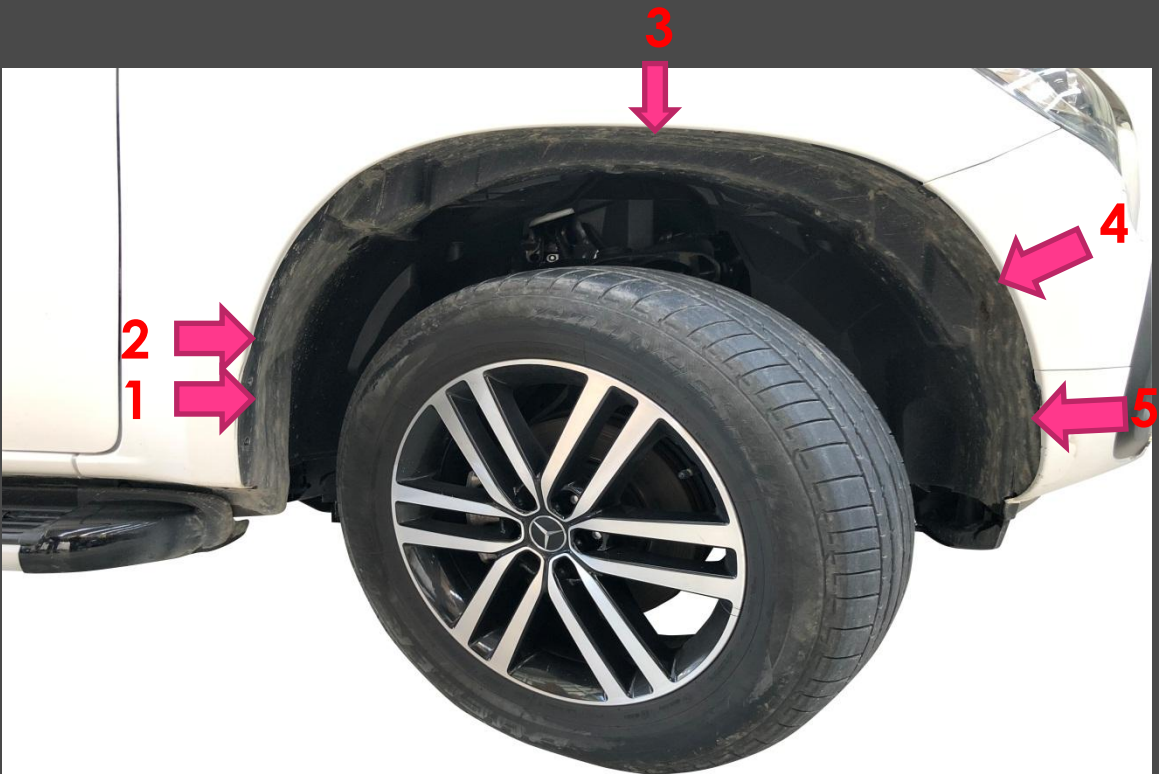


Image 3.1

- Image 3.1 Affix spring clips to points marked with an arrow



Image 3.2



Image 4.1

- Image 4.1 Placed to the product to the vehicle.
- Image 4.2 Affix washer screw (4.8x19) to points marked with arrow



Image 4.2



Image 5.1

- Image 5.1 Reference and mark 5 and 6 number points that marked with an arrow on the vehicle
- Image 5.2 Drill via 8mm diameter drill bit, paint with protector paint spray
- Image 5.3 Affix spring clips to number 1-2-3-4-5-6 points that marked with an arrow



Image 5.2

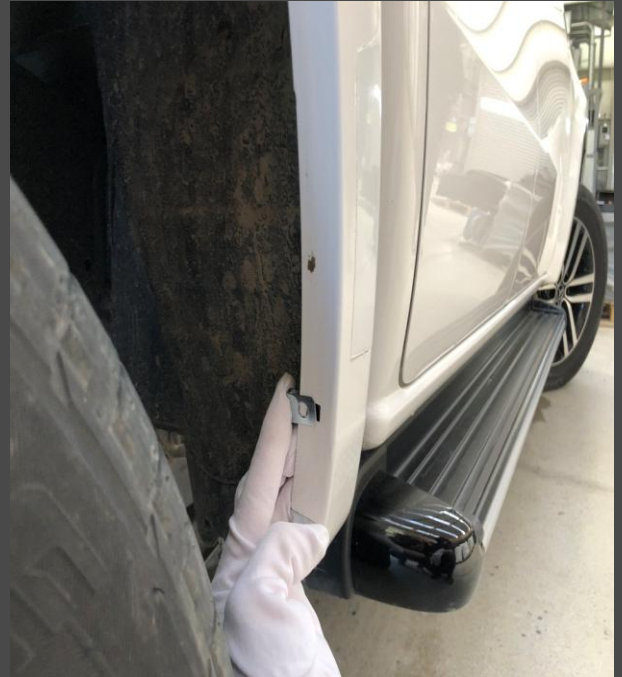


Image 5.3



Image 6.1

- Image 6.1 Placed the product to vehicle



Image 6.2

- Image 6.2 Affix washer screw (4.8x19).



Image 7.1

- Image 7.1 Your product is ready to use